


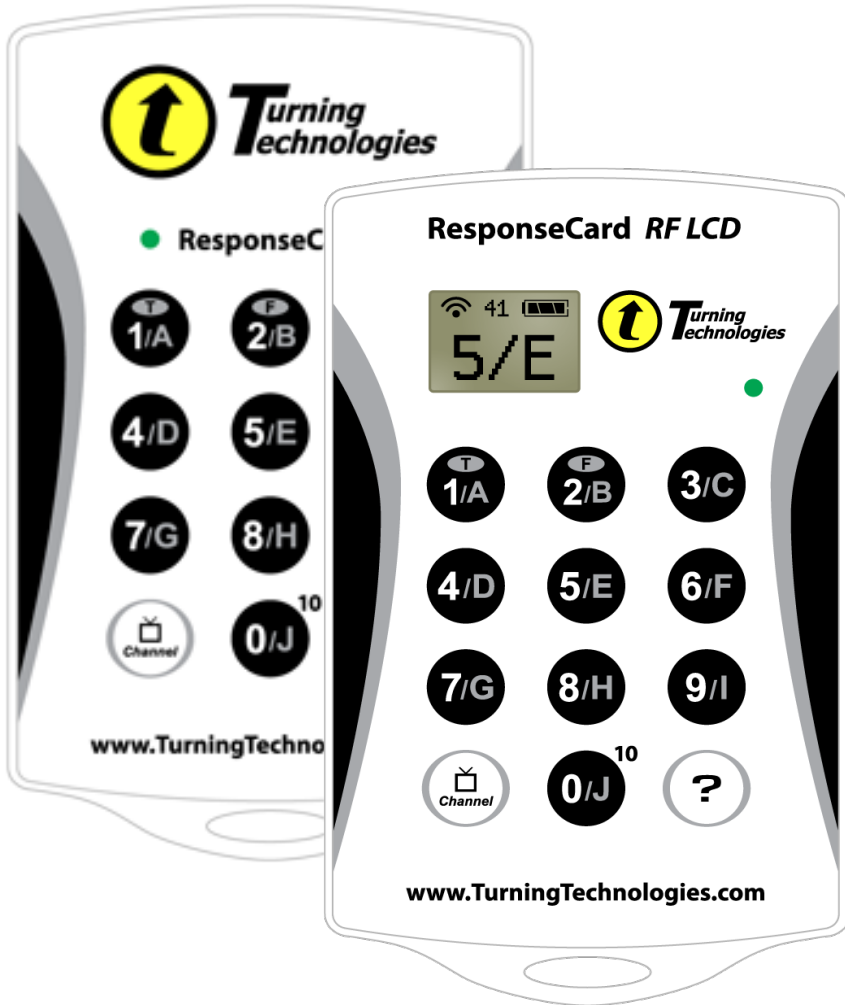

ResponseCard RF[®] and RF LCD[®]

The ResponseCard RF and RF LCD are audience response devices used when a presenter wants to gather immediate feedback from the audience.




CHANGING THE CHANNEL

1. Press the **Channel, CH** or **GO** button.
2. Enter the **two-digit** channel number. i.e. 07 or 52
3. Press the **Channel, CH** or **GO** button.

A **green** flash indicates the channel was successfully changed.

THE RF LCD SCREEN



When transmitting a response, the  symbol appears

Verify the channel the Response-Card is set to, i.e. 41

Determine battery life from the Battery Life Indicator

Verify your response on screen, i.e. 5/E

- A **green** flash indicates that the response was received.
- A **red** flash indicates that the response was not received.
- A single **yellow** flash indicates that polling is closed.
- Multiple **yellow** flashes indicate that the response is sending.